


# INSTALLATION INTRUCTIONS

## ANIMAL TRANSPORT VENTILATION

### PerformAir Vent

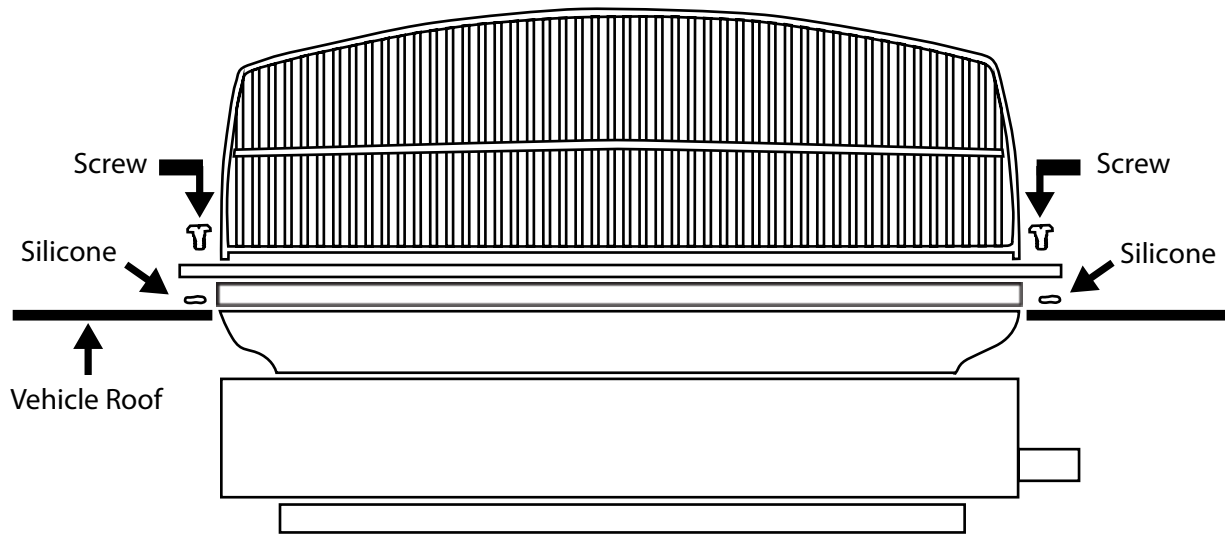

#### PURPOSE OF THE PRODUCT

The PerformAir Vent will provide ventilation in animal transport vehicles. Air movement will be felt beneath the Vent when the vehicle is moving allowing for air exchange to occur.

To be used in conjunction with the PerformAir Filter, air is filtered and diffused into the cabin of the vehicle as it moves.

#### INSTALLATION PROCEDURE

1. Locate the preferred position for the installation on the roof of the vehicle taking into account
  - concentration of airflow over vehicle
  - position of roofing supports
  - area of animal headspace
2. Mark roof in the desired location using the installation template. Cut out the roof section from the vehicle.
3. Drop the PerformAir Vent into the hole and position as required. Drill 11 holes into the vehicle roof to align with the 11 holes on the outer edges of the Vent.
4. Line edges with a silicone sealant.
5. Secure the Vent to the roof of the vehicle with 11 nuts and bolts or stainless steel rivets supplied.

*The PerformAir Vent is manufactured in Australia.*

*The PerformAir Filter needs to be replaced every 10,000kms or every 12 months.*



141 Gilba Rd, Girraween  
NSW, 2145, Australia  
[PerformAirVent.com](http://PerformAirVent.com)